

Thank you for ordering a PANG mirror from TÖNN!  
We hope your new mirror will look and feel good in your home.


## MOUNT YOUR MIRROR

### YOUR PARCEL INCLUDES:

Mirror                      Screw & plastic pins for wall


### YOU NEED:


Coffee and cake                      Drilling machine  
Folding rule                      Spirit-level  
Screwdriver                      Pen

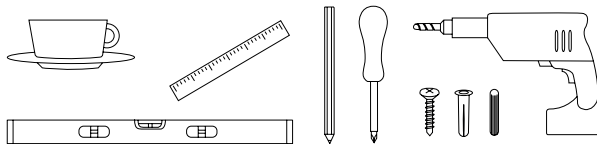

**PLEASE NOTE** The screws and pins included are adapted for good quality walls. If you are unsure about the material of your wall, please contact your nearest construction store for consultation.

## MONTERA

1. Unpack all parts from the packaging. It should contain one mirror, two pins and two screws.
2. Measure the dimension between the holes on the mirror.  
The small part of the hole should face upwards. 
3. Make marks on the wall and drill.
4. Drill, put the plastic pins into the holes and attach the screws.

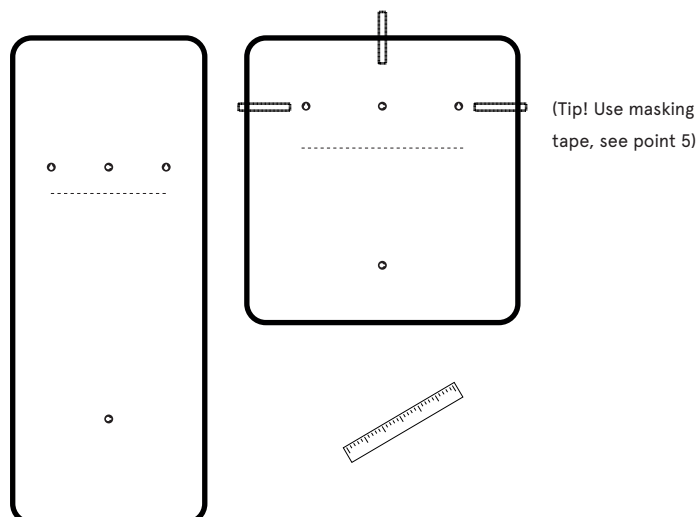

5. Hang your PANG mirror on the screws. A tip is to put masking tape on the sides of the holes on both the mirror and the wall. When the tapes meet the mirror, it will fit perfectly and be easier to assembly.
6. Enjoy a cup of coffee and a cake, you're done!

